


Revised 4/10/21

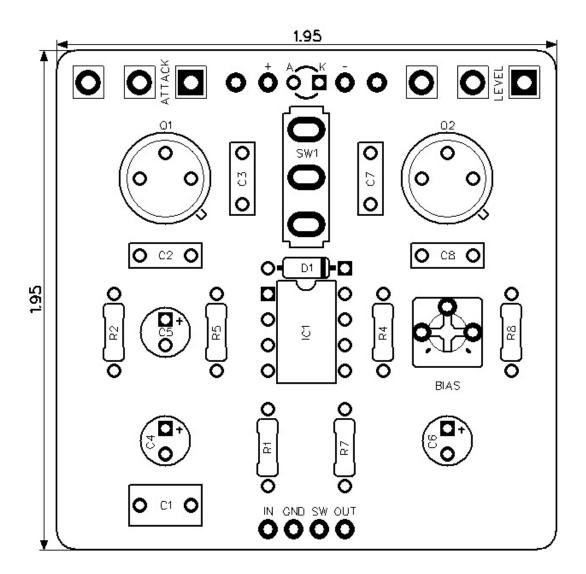

CONTROLS AND FEATURES

- Level
- Attack
- Mode (Toggle switch)


All trademarks and registered trademarks are the property of their respective owners. The company, product, and service names used in this web site are for identification purposes only. Use of these names, logos, and brands does not imply endorsement.



Box 66 Fuzz

Parts List (Page 1 of 1)


LOCATION	VALUE	TYPE	NOTES
R1	1M	Resistor, 1/4W	
R2	47K	Resistor, 1/4W	
R4	1K	Resistor, 1/4W	
R5	820R	Resistor, 1/4W	
R7	4K7	Resistor, 1/4W	
R8	10K	Resistor, 1/4W	
		,	
C1	220n	Film capacitor, 7.2 x 5.0mm	
C2	470p	Ceramic capacitor	
C3	4n7	Film capacitor, 7.2 x 2.5mm	
C4	22u	Electrolytic capacitor, 5mm	
C3 C4 C5 C6 C7	10u	Electrolytic capacitor, 5mm	
C6	47u	Electrolytic capacitor, 5mm	
C7	10n	Film capacitor, 7.2 x 2.5mm	
C8	47p	Ceramic capacitor	
	•		
D1	1N5817	Schottky diode, DO-41	
		<u> </u>	
Q1	OC71	BJT transistor, PNP Germanium	Alternate AC125
Q2	OC76	BJT transistor, PNP Germanium	
		,	
IC1	TC1044SCPA	Charge Pump IC, DIP8	
LEVEL	B500K	16mm right-angle PCB mount pot	
ATTACK	B1K	16mm right-angle PCB mount pot	
BIAS	25K	Trim potentiometer, 3362P type	
SW1	SPDT	Toggle switch, SPDT	2-position (ON/ON)
<u> </u>	1		1

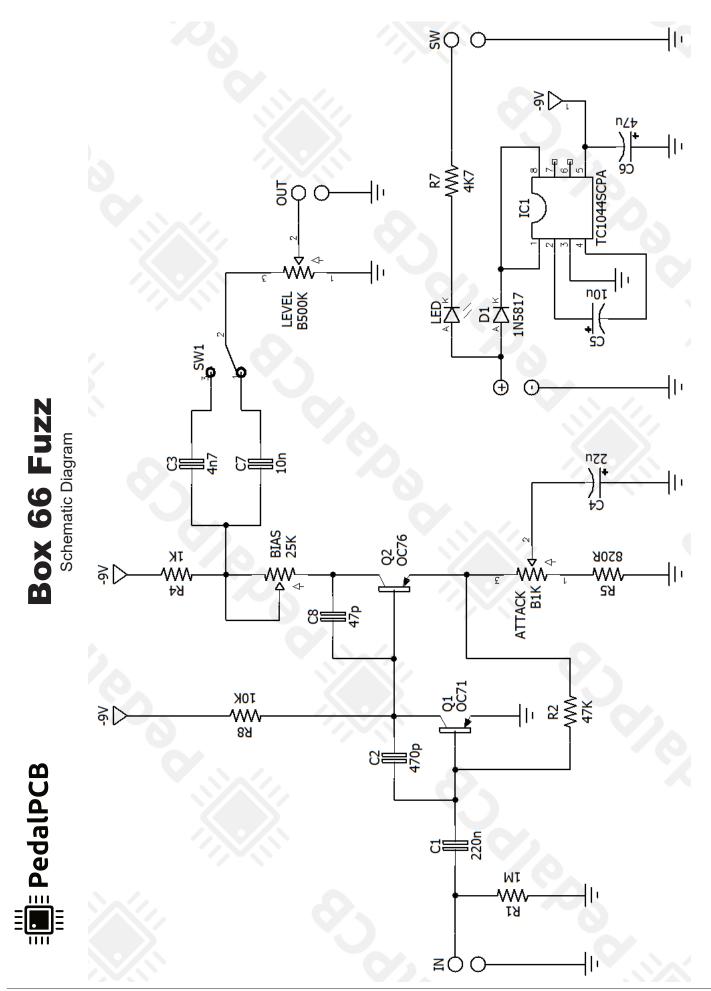



Box 66 Fuzz

Wiring Diagram

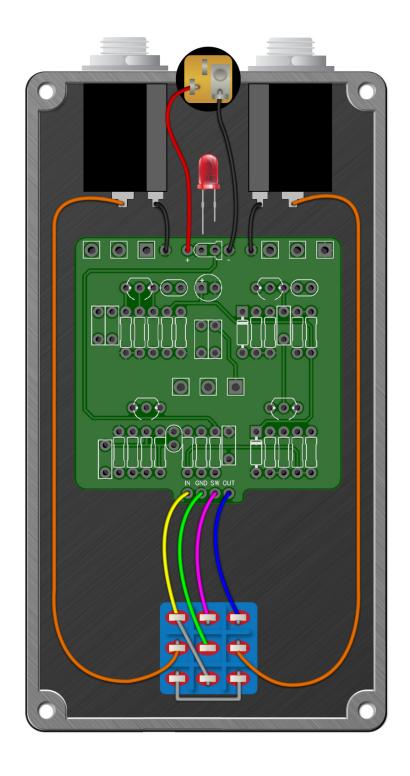



Box 66 Fuzz

Drill Template
125B Enclosure

