


PedalPCB.com

Wrectifier PCB

Vintage/Modern Switch Modification

Revision 12.06.17

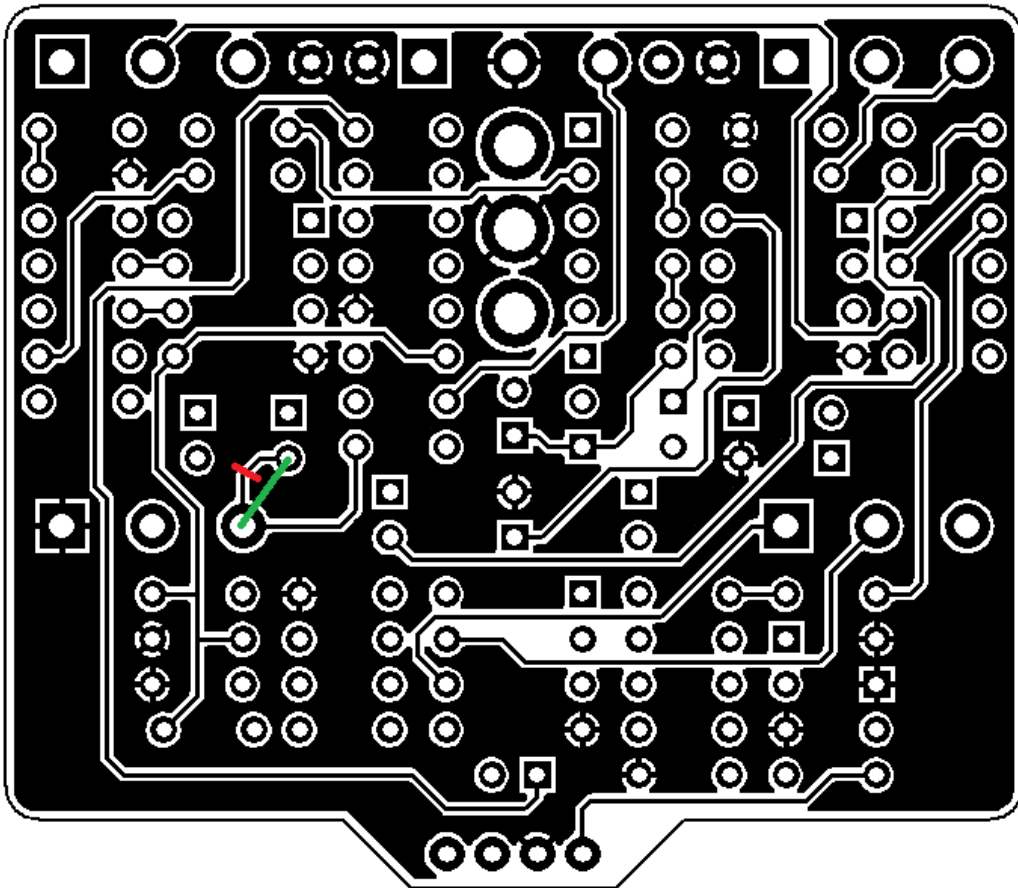

Back of PCB

- 1) Cut PCB trace at point marked in **Red**
- 2) Solder 10K resistor across points marked with **Green** line